



Sandy

User manual

Important: Read the following instructions carefully before use and keep them for future reference.

Important: Lire les instructions suivantes attentivement avec utilisation et les conserver pour les besoins ultérieurs de référence.

INDEX

Warnings (EN)	3
Waarschuwingen (NL)	4
Warnungs (DE)	5
Attention (FR)	6
Maintenance (EN), Onderhoud (NL)	7
Wartung (DE), Maintenance (FR)	8
Wagon overview	9
Attach the fenders	10
Attach the wheels	11
Attach wagon fabric	12
Attach the canopy	13
Attach tray & cupholder	14
Harness	15
Brakes	16
How to fold	17
Push and pull modes	18
Car seat adapters (sold separately)	19
Company info	22

WARNINGS

- Fall hazard: To avoid serious injuries from falling or sliding out, always use the safety harness and ensure that your child is properly positioned.
-
- Never leave your child unattended.
- Never park your wagon on a hill with your child inside.
- Never place purses, shopping bags, parcels or accessory items on the handle or canopy.
- Never sit or stand on the side wall panels of the wagon.
- Never sit or stand on the folded seat backs of the wagon.
- Never use your wagon while ascending or descending stairs, or using an escalator.
- Never allow your child to crawl under the user supplied car seat when attached.
- Never use your wagon without rear wheel safety fenders in place.
- Never make any alternations or modifications to your wagon with products or accessories not supplied by the manufacturer as this may cause instability or structural damage not covered under warranty.
-
- Always ensure that your child is properly positioned by using the safety harness at all times.
- Always lock the brakes while taking your child in or out of the wagon.
- Always check that your wagon is fully open and locked before use.
- Always keep hands away from moving wheels.
- Always check that all accessories and attachments devices are correctly attached before use.
- Always keep fingers away from moving parts when folding, unfolding, or adjusting the wagon to prevent entrapment or pinching.

WAARSCHUWINGEN

- Valgevaar: Om ernstig letsel door vallen of uitglijden te voorkomen, moet u altijd het veiligheidsharnas gebruiken en ervoor zorgen dat uw kind goed zit.
- Laat uw kind nooit onbeheerd achter.
- Parkeer uw wagen nooit op een heuvel met uw kind erin.
- Plaats nooit portemonnees, boodschappentassen, pakjes of accessoires op het handvat of de kap.
- Ga nooit op de zijwandpanelen van de wagen zitten of staan.
- Ga nooit op de neergeklapte rugleuningen van de wagen zitten of staan.
- Gebruik uw wagen nooit tijdens het op- of aflopen van trappen of het gebruik van een roltrap.
- Laat uw kind nooit onder het door de gebruiker geleverde autostoeltje kruipen als het is bevestigd.
- Gebruik uw wagen nooit zonder veiligheidsspatborden op het achterwiel.
- Breng nooit wijzigingen of aanpassingen aan uw wagen aan met producten of accessoires die niet door de fabrikant zijn geleverd, aangezien dit instabiliteit of structurele schade kan veroorzaken die niet onder de garantie valt.
- Zorg er altijd voor dat uw kind goed gepositioneerd is door het veiligheidsharnas te allen tijde te gebruiken.
- Vergrendel altijd de remmen wanneer u uw kind in of uit de wagen brengt.
- Controleer voor gebruik altijd of uw wagen volledig open en vergrendeld is.
- Houd uw handen altijd uit de buurt van bewegende wielen.
- Controleer voor gebruik altijd of alle accessoires en hulpstukken correct zijn bevestigd.
- Houd uw vingers altijd uit de buurt van bewegende delen bij het inklappen, uitvouwen of afstellen van de wagen om beknelling of beknelling te voorkomen.

WARNUNGS

- Sturzgefahr: Um schwere Verletzungen durch Stürze oder Ausrutschen zu vermeiden, verwenden Sie immer den Sicherheitsgurt und stellen Sie sicher, dass Ihr Kind richtig sitzt.
- Lassen Sie Ihr Kind niemals unbeaufsichtigt.
- Parken Sie Ihr Auto niemals mit Ihrem Kind auf einem Hügel.
- Legen Sie niemals Geldbörsen, Einkaufstüten, Pakete oder Zubehör auf den Griff oder die Haube.
- Niemals auf den Seitenwänden des Fahrzeugs sitzen oder stehen.
- Niemals auf den umgeklappten Rückenlehnen des Fahrzeugs sitzen oder stehen.
- Benutzen Sie Ihr Auto niemals, wenn Sie Treppen hoch- oder runterfahren oder eine Rolltreppe benutzen.
- Lassen Sie Ihr Kind niemals unter den vom Benutzer bereitgestellten Autositz kriechen, wenn dieser befestigt ist.
- Benutzen Sie Ihr Auto nie ohne hintere Kotflügel am Hinterrad.
- Nehmen Sie niemals Änderungen oder Modifikationen an Ihrem Fahrzeug mit Produkten oder Zubehör vor, die nicht vom Hersteller geliefert wurden, da dies zu Instabilität oder strukturellen Schäden führen kann, die nicht von der Garantie abgedeckt sind.
- Stellen Sie immer sicher, dass Ihr Kind gut positioniert ist, indem Sie immer den Sicherheitsgurt verwenden.
- Verriegeln Sie immer die Bremsen, wenn Sie Ihr Kind in oder aus dem Auto setzen.
- Überprüfen Sie immer, ob Ihr Auto vollständig geöffnet und verriegelt ist, bevor Sie es benutzen.
- Halten Sie Ihre Hände immer von sich bewegenden Rädern fern.
- Prüfen Sie vor der Verwendung immer, ob alle Zubehörteile und Aufsätze richtig angebracht sind.
- Halten Sie Ihre Finger beim Zusammenklappen, Aufklappen oder Einstellen des Schlittens immer von beweglichen Teilen fern, um ein Einklemmen oder Einklemmen zu vermeiden.

ATTENTION

- Risque de chute : pour éviter les blessures graves causées par une chute ou un glissement, utilisez toujours le harnais de sécurité et assurez-vous que votre enfant est correctement assis.
- Ne laissez jamais votre enfant sans surveillance.
- Ne garez jamais votre voiture sur une colline avec votre enfant dedans.
- Ne placez jamais de sacs à main, sacs de courses, colis ou accessoires sur la poignée ou le capot.
- Ne jamais s'asseoir ou se tenir debout sur les parois latérales du véhicule.
- Ne jamais s'asseoir ou se tenir debout sur les dossiers rabattus du véhicule.
- N'utilisez jamais votre voiture en montant ou en descendant des escaliers ou en utilisant un escalator.
- Ne laissez jamais votre enfant ramper sous le siège auto fourni par l'utilisateur lorsqu'il est attaché.
- N'utilisez jamais votre voiture sans garde-boue arrière sur la roue arrière.
- N'apportez jamais de changements ou de modifications à votre véhicule avec des produits ou accessoires non fournis par le fabricant, car cela pourrait provoquer une instabilité ou des dommages structurels non couverts par la garantie.
- Assurez-vous toujours que votre enfant est bien positionné en utilisant le harnais de sécurité à tout moment.
- Verrouillez toujours les freins lorsque vous faites monter ou descendre votre enfant de la voiture.
- Vérifiez toujours que votre voiture est complètement ouverte et verrouillée avant utilisation.
- Gardez toujours vos mains éloignées des roues en mouvement.
- Vérifiez toujours que tous les accessoires et accessoires sont correctement fixés avant utilisation.
- Gardez toujours vos doigts éloignés des pièces mobiles lors du pliage, du dépliage ou du réglage du chariot pour éviter tout pincement ou coincement.

MAINTENANCE

- Cleaning:
- Frame and wagon fabric: Wipe with a damp cloth and let it dry.
- To clean your wagon frame, handlebar, fenders, and wheels:
- Wipe with a damp cloth and a mild cleaning solution and dry thoroughly. DO NOT use abrasives.

To clean your snack tray and cupholders:

- Wash in the sink or with a hose.
- Wipe with a damp cloth using a mild cleaning solution and dry thoroughly. DO NOT use abrasives.

ONDERHOUD

- Schoonmaak:
- Frame en wagenstof: afnemen met een vochtige doek en laten drogen.
- Om uw wagenframe, stuur, spatborden en wielen schoon te maken:
- Veeg af met een vochtige doek en een milde reinigingsoplossing en droog grondig. Gebruik GEEN schuurmiddelen.

Om uw snackplateau en bekerhouders schoon te maken:

- Wassen in de gootsteen of afspoelen.
- Veeg af met een vochtige doek met een milde reinigingsoplossing en droog grondig. Gebruik GEEN schuurmiddelen.

WARTUNG

- Reinigung:
- Rahmen und Autogewebe: mit einem feuchten Tuch abwischen und trocknen lassen.
- So reinigen Sie Ihren Autorahmen, Lenker, Schutzbleche und Räder:
- Mit einem feuchten Tuch und milder Reinigungslösung abwischen und trocknen tiefgreifend. KEINE Scheuermittel verwenden.

So reinigen Sie Ihr Snacktablett und Ihre Getränkehalter:

- In der Spüle oder mit einem Schlauch waschen.
- Mit einem mit milder Reinigungslösung angefeuchteten Tuch abwischen und trocknen tiefgreifend. KEINE Scheuermittel verwenden.

MAINTENANCE

- Nettoyage:
- Cadre et toile de voiture : essuyez avec un chiffon humide et laissez sécher.

Pour nettoyer le cadre, le guidon, les ailes et les roues de votre voiture :

- Essuyez avec un chiffon humide et une solution de nettoyage douce et séchez profond. NE PAS utiliser d'abrasifs.

Pour nettoyer votre plateau snack et vos porte-gobelets :

- Laver dans l'évier ou avec un tuyau.
- Essuyez avec un chiffon imbibé d'une solution nettoyante douce et séchez profond. NE PAS utiliser d'abrasifs.

WAGON OVERVIEW

Handlebar

Harness

Fender

Rear wheel

Footwell

Brake

Front wheel

Canopy

Cupholder

Mesh pockets

Tray

 
Storage

ATTACH THE FENDERS

For ease of installation, fenders are interchangeable for left and right sides.


To attach fenders:

- Slot each fender into a wheel of arch.
- Ensure that the bottom of the fender locks securely into the open slot in the rear axle mount. You will hear a **CLICK** when fender is secured in place.

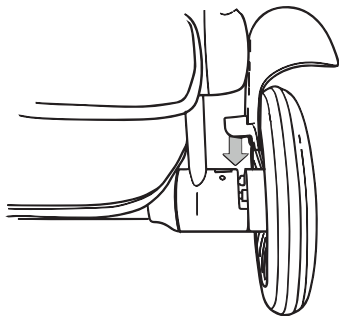



To remove fender:

 - Pull fenders in an upward direction until fender detaches from rear axle mount.

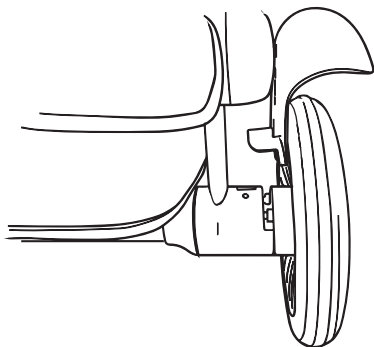

ATTACH THE WHEELS

  For ease of installation, both rear and front wheels are interchangeable for left and right sides, respectively.

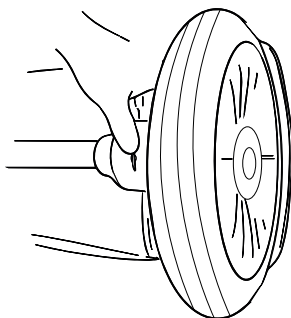
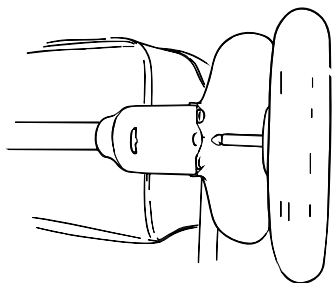


To attach rear wheels:

- Push the rear wheel post into the rear wheel housing until **CLICK** is heard.
- Repeat on the opposite side.

To remove the rear wheels:

  - Press the button located below wheel housing and pull the wheel outward until it is released.
- Repeat on opposite side.

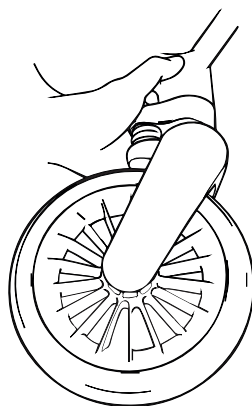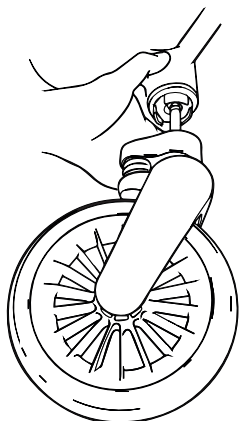



To attach front swivel wheels:

- Push the front wheel post into the front wheel housing until **CLICK** is heard.
- Repeat on the opposite side.

To remove front swivel wheels:

- Press the button located below wheel housing and pull the wheel outward until it is released.
- Repeat on opposite side.

  ATTACH WAGON FABRIC

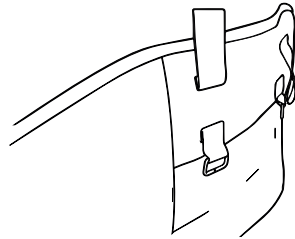
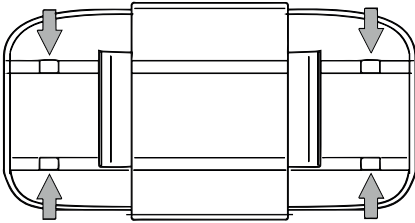


To attach your wagon seat to the frame:

- Locate the 4 velcro loops at the base of the wagon seat (2 loops in the rear & 2 loops in the front).
- Loop and secure the velcro loops around the frame base.
- There will be 2 velcro loops that will need to loop through slots that are part of the bonus storage area.

After securing the velcro loops:

 
 
- Locate the 8 d-rings on the wagon seat.
- Loop the webbing straps around the front and rear seat backs.
- Loop the webbing straps around the side interiors of the seat backs.
- Fasten the d-rings to the fabric loops.

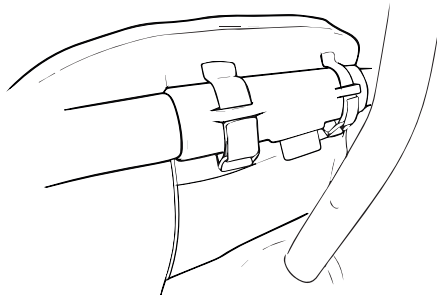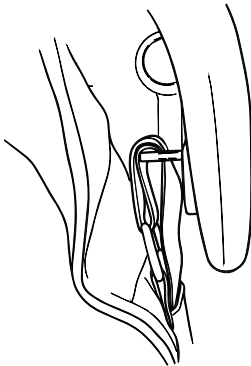

To remove the wagon fabric:

- Unfasten d-rings from fabric loops.
- Pull apart velcro loops to detach.

  ATTACH THE CANOPY

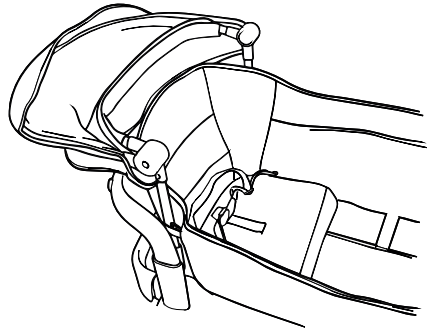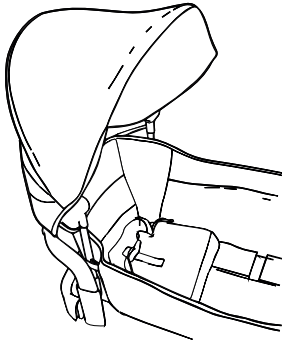



To attach the canopy:

- Locate posts on each side of the canopy.
- Slide the canopy posts into side housing on the seat backs.
- Canopy is extendable and offers UPF 50+ protection.

To remove the canopy:

- Pull both sides of the canopy posts until the canopy fully releases from housings.

 
 
Pull forward to use canopy; push backwards to retract.

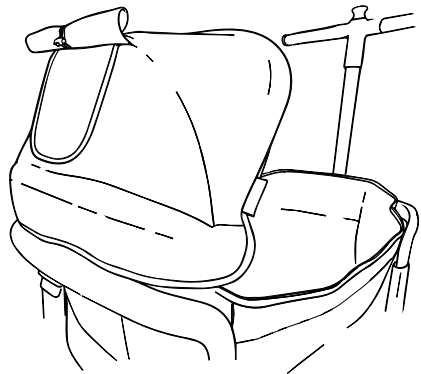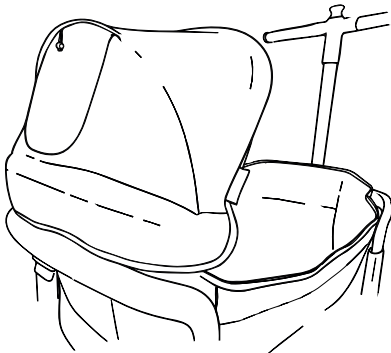

To open the peek-a-book window:

- Pull upwards on the window flap until it is in a fully opened position.
- To secure the position, roll up the window flap and loop toggle through the elastic cord to secure it in place.

  ATTACH TRAY & CUPHOLDER

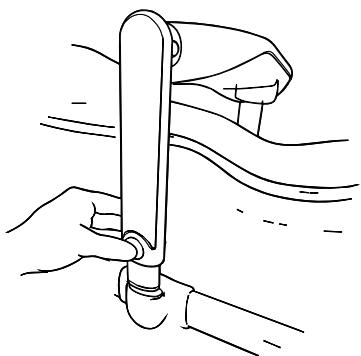
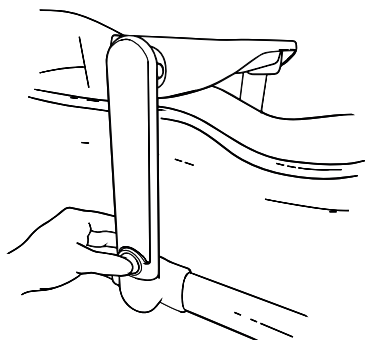


To attach the tray:

- Assemble the tray by attaching the 2 vertical posts to each side of the tray.
- Locate tray attachment points on frame. If there are caps on the attachment points, remove and store them away.
- Insert the tray posts at attachment points until **CLICK** is heard.

To remove the tray:

  - Press on the buttons located on side posts and pull to release the tray.

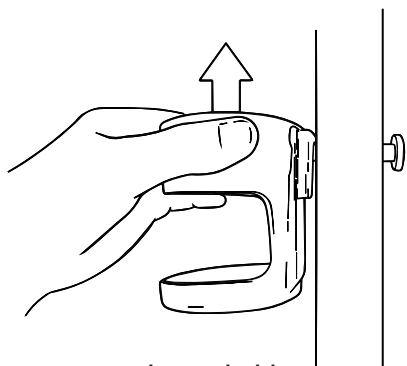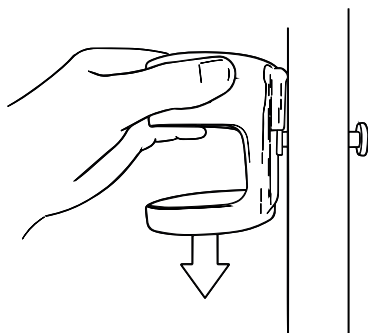


To attach cupholder:

- Slide the cupholder into attachment points located on the handle bar.
- Push the cup holder in a downward motion to secure in place.
- Push the cup holder in a downward motion to secure in place.

To remove the cupholder:

- Pull the cupholder in an upward motion to release.

 
HARNESS

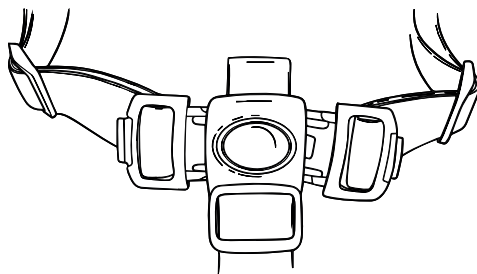

Before you place your child in the wagon, press the brake pedal down until it clicks into the locked position.

3-point harness

 
- Place your child in the wagon and position the crotch belt between your child's legs.
- Fasten both waist belts to the buckle on each side of the crotch belt until you hear a CLICK on both sides.

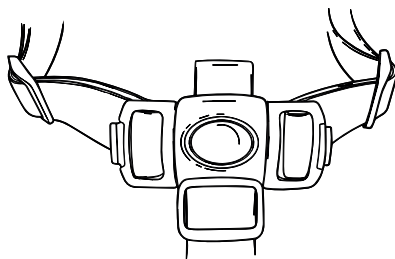

- Ensure the buckle is away from your child's skin to avoid a pinch when securing the buckle.
- Tighten the waist belt so that the harness is snug against your child.
- To tighten the waist belt, feed the anchored end of the waist belt up through the buckle to form a loop. Pull the free end of the waist belt.
- To loosen the waist belt, feed the free end of the waist belt up through the buckle to form a loop. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt. Repeat this step to loosen the other waist belt.


IMPORTANT: Check and ensure the harness is securely attached by pulling it away from your child; the restraint system should remain securely fastened.

 BRAKES

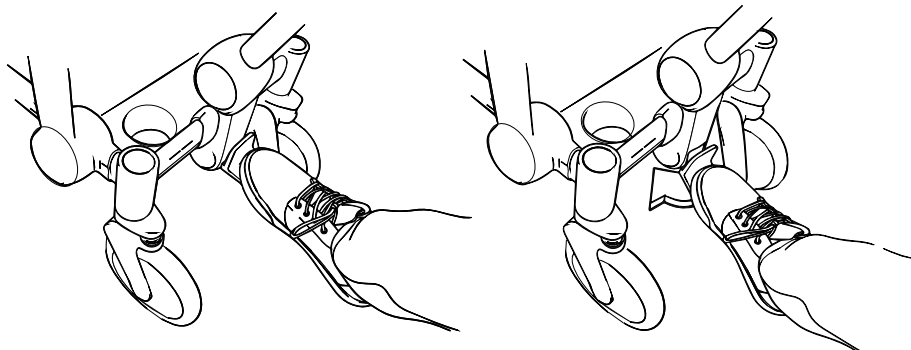

To engage brakes:

 
- Apply a light downward pressure on the bottom section of the linked brake lever located in the middle of the rear wheel axle.
- Check to make sure the brakes are in a fully locked position. The wagon should not move when pushed.

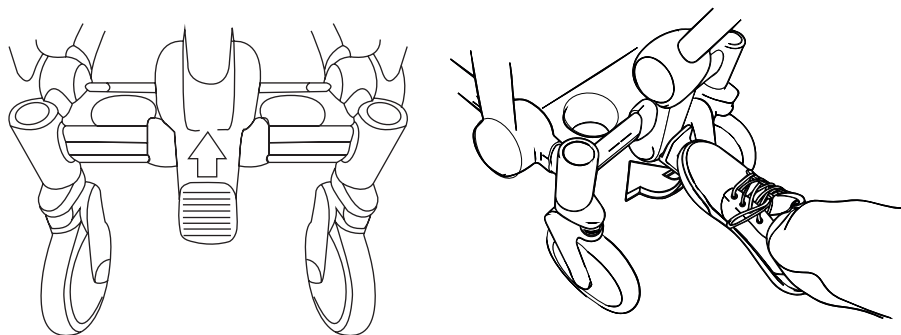

To release brakes:



- Apply a light downward pressure on the top section of the linked brake lever located in the middle of the rear wheel axle.

 HOW TO FOLD

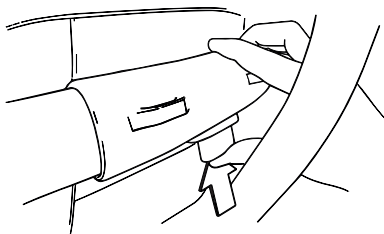


To fold your wagon frame:

  - Remove any accessories attached to the wagon, including the canopy and snack tray.
- Locate the release button below each seat back.
- Push the buttons to release the seat back and push downwards.
- Pull the knob to release the handle bar and push downward.

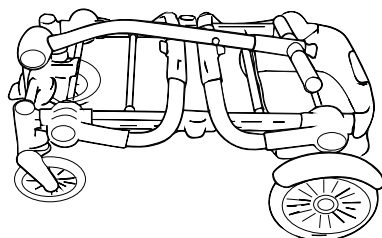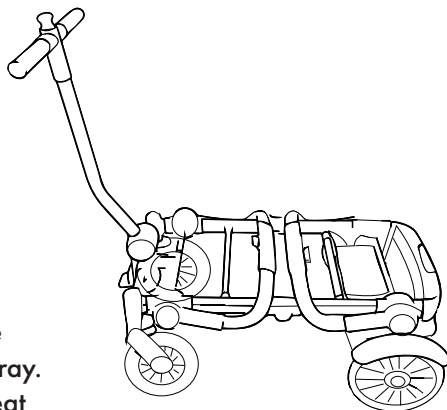


Upright storage:

 - To store you wagon upright, place on a hard and flat surface when using the standing storage position.

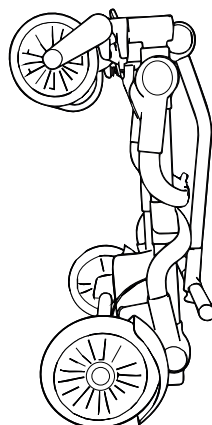


PUSH AND PULL MODES

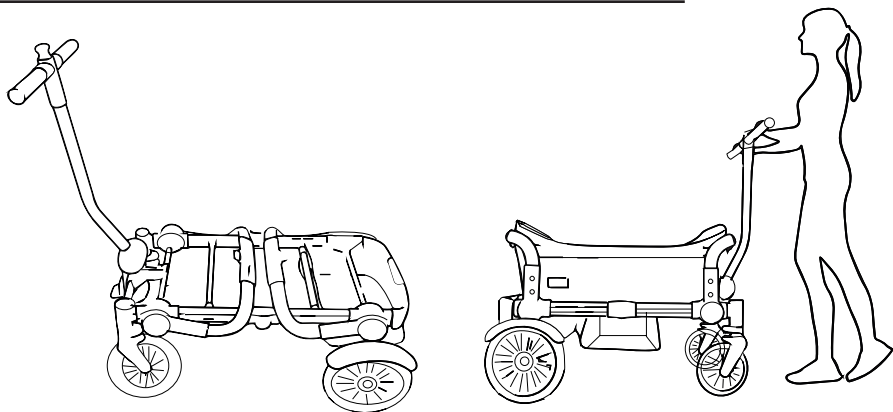 

Push mode:

 - To set the wagon in push mode, pull the knob and lock the handle upright.

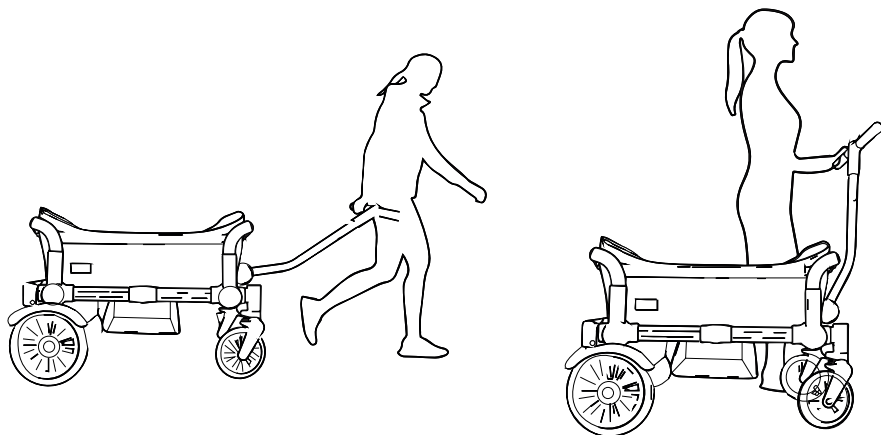

Pull mode:

- To set the wagon in pull mode, pull the knob to unlock and drop the handle.

CAR SEAT ADAPTER

SOLD SEPARATELY

WARNING

- Never leave children unattended. Failure to follow these warnings and instructions could result in serious injury or death.
- Never use infant car seat adapter as a handle to lift the wagon.
- Never place infant in the car seat before you have firmly attached the car seat to the wagon.
- Never remove the infant car seat from the wagon frame with the infant in the car seat.
- Always verify that the car seat adapter is correctly installed and firmly secured into the wagon before installing an infant car seat.
- Weight limitations: this product is recommended only for infants within the height and weight limits of the infant car seats specified in the car seat manual.
- Always use infant car seat restraint system and harness as recommended by the car seat manufacturer.
- Please review these instructions carefully to ensure the safety of your child when installing the car seat adapter. If any hardware is missing or becomes lost, please do not use!

 
MAINTENANCE

- Wipe with a damp cloth and let dry.
- For a more thorough cleaning, rinse with a hose or hand wash with a mild detergent and dry thoroughly.
- Do not use abrasives. Do not put in dishwasher.



COMPATIBILITY

- This car seat adapter is compatible with infant car seat brands listed below:
- Maxi Cosi
- Cybex
- Clek
- Nuna


ASSEMBLY

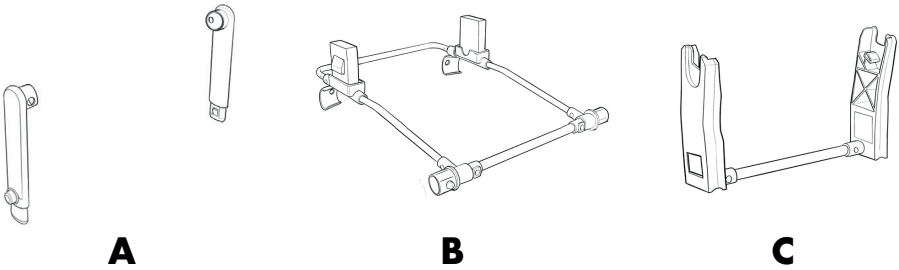

  - Attach both of the posts of A to part B
 - Once posts are attached, insert posts into port plugs until a click is heard.
- Please ensure that all accessory port plugs have been removed.

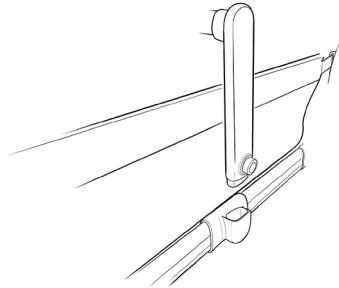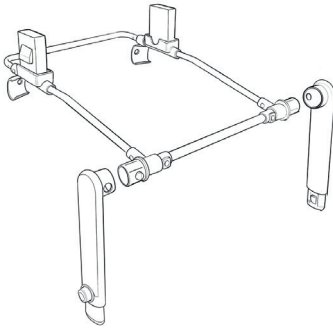

ADAPTER TO WAGON

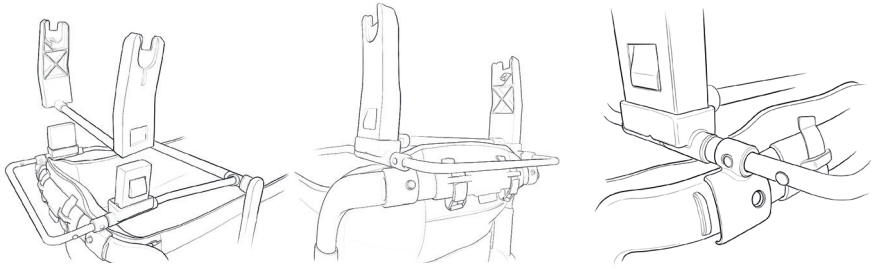 

- Attach part C to the assembled car seat adapter until a click is heard.
- Secure the two clips over the seat back of the wagon. Ensure the clips are firmly secured until a click is heard.

COMPANY INFO

Company address

DERYAN B.V.
Marithaime 8
6662 WD Elst
The Netherlands

Telephone

+31 481 351 070

Email

team@deryan.com

Website

www.deryan.com